

MARK 6

SERVICE MANUAL

ENGLISH

TABLE OF CONTENTS

SECTION	PAGE
1.0 SAFETY PRECAUTIONS	3
2.0 TECHNICAL SPECIFICATION	3
3.0 COMMISSIONING	4
4.0 OPERATION	8
5.0 ROUTINE MAINTENANCE	21
6.0 MACHINE ADJUSTMENTS	25
7.0 PROBLEM SOLVING	38
8.0 ILLUSTRATED PARTS LIST	60

1.0 SAFETY PRECAUTIONS

PLEASE READ COMPLETE MANUAL BEFORE ATTEMPTING TO OPERATE THIS MACHINE.

**DANGER HIGH VOLTAGES
AND MOVING PARTS.**

INTENDED USE

This is a special purpose machine for counting and batching substances of 30 to 170 g.s.m. Only use tape approved by Vacuumatic.

INSTALLATION

This machine should be installed, set-up and maintained by qualified personnel.

Mains power is activated by the toggle switch on the electronic console.

RISK OF INJURY

This machine contains high speed rotating parts and high voltages.

Keep hands clear of counting head mechanism when operating.

Never operate this equipment with the covers removed.

Switch off power before inserting or removing an electrical connection.

The guards and covers should under no circumstances be tampered with. If guards and covers are removed, e.g. for maintenance, they must be replaced before operation.

AIRBORNE NOISE EMISSIONS

The equivalent continuous A-weighted sound pressure level emitted by this machine is 78dB (A).

2.0 TECHNICAL SPECIFICATION

Minimum sheet size:	560mm x 300mm
Maximum sheet size:	Largest commercial sizes
Paper stack height:	1220mm
Counting speed:	Variable to 1500 sheets per minute
Substance range:	30-170gsm subject to paper quality
Tabbing range:	20-999 sheets

Dimensions:

Height of machine:	1980mm
Depth of machine:	1450mm
Width of machine:	910mm
Minimum height of pallet:	130mm

Electrical:	230v 50 Hz 1 phase A.C. 6 amp
	115v 60 Hz 1 phase A.C. 12 amp

Export Shipping Case:	Nett weight: 388kg
	Gross weight: 574kg
	Dimensions: H: 2260mm x 1110mm W x 1410mm D.